

How to use the BLF Call Park feature on Yealink Phone

● Overview

The BLF call park feature enables you to monitor an orbit extension and pick up the parked number on this extension.

BLF Call Park feature need PBX supported, Yealink Phones (T28/T26/T22/T20) support BLF Call Park feature in version 50(x.50.x.x) and higher.

● Setting

1. Access to phone's Web UI → Account → Advanced, enabled the Dialog-Info Call Pickup option, press the "confirm" button to save the changes.

Voice Encryption (SRTTP)	<input type="radio"/> On <input checked="" type="radio"/> Off
ptime(ms)	20
BLF List URI	
Shared Line	Disabled
Dialog-Info Call Pickup	Enabled
BLA Number	
BLA Subscription Period(Scope:60~7200)	300
SIP Send MAC	Enabled
SIP Send Line	Enabled
SIP Registration Retry Timer(Scope:0~1800) (seconds)	30

Confirm Cancel

- 1) Choose Phone → DSS Key → Memory Key. Choose the "Type" as KeyEvent, "Mode" as Call Park, in the "Line" field, select a line for which to apply this key, and enter the orbit number you want to monitor, press the "confirm" button to save the changes.

Key	Type	Mode	Line	Expansion	Pickup Number
DSS Key 1	KeyEvent	Call Park	Line 1	101	
DSS Key 2	N/A	Conference	Line 1		
DSS Key 3	N/A	Conference	Line 1		
DSS Key 4	N/A	Conference	Line 1		
DSS Key 5	N/A	Conference	Line 1		

NOTE
Key Type
The free function key 'Types' Speed Dial, BLF, Key Event, Intercom, URL.
BLF
The button can be configured Busy Line Field function with specified account. This feature must be supported by the sip

For example: you configure BLF call park feature on DSSKEY 1, the monitor extension number is 101. If there have a call parked at extension 101, the LED of DSSKEY 1 will be slow blinking green, press DSSKEY 1 can pick up this call.